



User Guide (Quick Start)

Backup and Transfer Your Cellular Phonebook Contacts Instantly!

Model No. BP-1826 (Ver: 2.1)

Package Contents:

- Backup-Pal® Device
- Adapter Tip(s)
- User Guide (Quick Start)
- Phone Specific Setup/Connection guide
- Compatibility Chart

For additional support, please visit:

<http://www.backup-pal.com>

Illustration of Backup-Pal®

Interface Adapter


Status/LED Light

BACKUP Button

RESET Button

RESTORE Button


Detachable Tip(s)

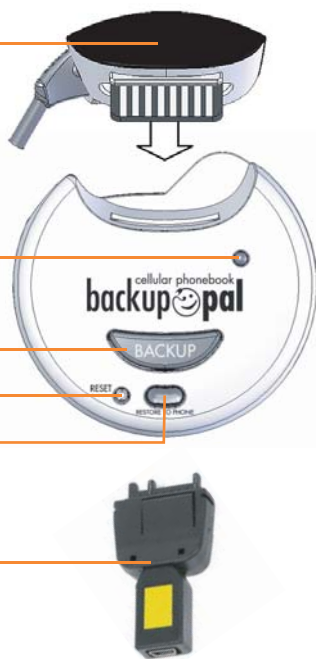

Important: Only Use Backup-Pal® After the Following Steps

1. Fully charge your phone prior to performing operation
2. Turn phone OFF, and ON again
3. Set phone options for 'Data' connection (see "Phone Specific Setup/Connection Guide")
4. Exit any menu options and make sure your phone is displaying the main screen
5. If you have a flip or slide phone, keep the phone in an open position during the operation
6. Do not use the phone or the menu during any operation

Before Using Backup-Pal®:

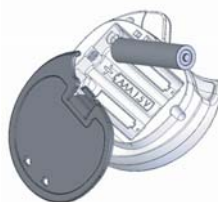

Make sure 3 AAA batteries* are properly inserted into Backup-Pal®

1. Open battery compartment cover.
2. Insert batteries as shown in battery compartment.

*Batteries sold separately

Connecting Backup-Pal®

Step A

1. Plug in Interface Adapter
2. Attach the correct tip for your phone* to Backup-Pal®

*See "Phone Specific Setup/Connection Guide"



Step B

Connect Backup-Pal® with the correct tip (From step A) to the data-port on your phone. (Data-port location may vary, please refer to the user manual for your specific phone)



Backing-Up or Restoring Cellular Phonebook

1. Connect Backup-Pal® to cellular phone. (See "Connecting Backup-Pal®")

2. BACKUP/RESTORE Instructions:

TO BACKUP:

Press and release [BACKUP] button



TO RESTORE:

Hold [RESTORE] button for 5 seconds



3. Observe the Status Light (LED) indication of Backup-Pal® progress as operation is performed. See the "Status Light Indication Guide" below to interpret results.

STATUS LIGHT INDICATION GUIDE

ORANGE FLASHES	Detecting Phone
ALTERNATING RED AND GREEN	Set Phone options for data connection (See Phone Specific Setup/Connection Guide)
ALTERNATING ORANGE AND RED	Backup-Pal contains data from another phone. To delete existing data, press and hold RESET for 5 seconds
GREEN FLASHES	Operation in progress
SOLID GREEN LIGHT	Operation Completed Successfully
SOLID ORANGE LIGHT	Operation Completed (some data missing)
RED FLASHES	
2 FLASHES	Phone not plugged in
3 FLASHES	Phone not supported
4 FLASHES	Data Error. Fully recharge phone
SHORT FLASHES	Replace batteries

Note: "Status Light Indication Guide" is also available on the battery cover of Backup-Pal®.

Checking Status of Last Operation

CHECKING BACKUP STATUS

Quickly tap [BACKUP] button twice and refer to the "Status Light Indication Guide"

CHECKING RESTORE STATUS

Quickly tap [RESTORE] button twice and refer to the "Status Light Indication Guide"

Resetting/Clearing Backup-Pal® Memory and other Important Instructions



Clearing Backup-Pal® Memory— (RESET)



1. DISCONNECT Backup-Pal® unit from cellular phone.
2. Press and Hold [RESET] button for 5 seconds.

Note: During RESET Operation, the Status LED/Light will flash orange.

Important Security Feature!

To prevent overwriting/deleting existing data on Backup-Pal®, only data from one phone may be backed up at a time (based on phone's serial number). To use with another phone, delete data on the device by pressing and holding RESET for 5 seconds.

Setting proper DATA Connection mode for your phone

For some phone models, the 'USB Connection Settings' must be set to proper Data mode to operate with your Backup-Pal®.

For further instructions, please refer to the included "Phone Specific Setup/Connection Guide" for your phone.

Alternatively, you may find more information online at www.backup-pal.com/support or refer to the user manual for your phone.

If you experience technical difficulties while using Backup-Pal®:

1. Firmly grasp the Interface Adapter (Black area on top of Backup-Pal®), and gently pull it out.
2. Re-insert the Interface Adapter back into Backup-Pal®.
3. Fully recharge phone
4. Restart and Open (flip/slide) phone before operation
5. Wait one full minute until phone is ready
6. Retry last operation

Product Warranty

Subject to the provisions described below, this product is protected for ninety (90) days against defects in material and workmanship. Only consumers purchasing this product from an authorized AWS retailer may obtain coverage under this warranty. Any AWS products obtained from sources other than the authorized AWS retailers are not covered by this warranty.

AWS Duties Under This Warranty:

Should the product fail to perform as described above within the warranted period, it will be repaired or replaced with the same or functionally equivalent product by AWS, at its discretion, free of charge provided you:

- (1) Return the failed product to an AWS designated repair facility with shipping charges covered by You (Please ship the failed product in the original or a properly padded, protective replacement container to an AWS designated repair facility. Please note that you are responsible for shipping costs associated with sending AWS the failed product).
- (2) Provide AWS with proof of the original purchase date.

Repaired or replacement products will be returned to you with shipping charges covered by AWS. Replacement products may be refurbished or contain refurbished materials that have been tested to meet AWS specifications. AWS warrants any repaired or repaired product for a period of thirty (30) days from shipment, or through the end of the original warranty, whichever is longer. If AWS, by its sole determination, is unable to repair or replace the defective product, it will refund the depreciated purchase price of the product.

Important Note: By sending product for replacement You agree to transfer ownership of the original product to AWS. AWS will not return your original product to You. Data recovery is not covered under this warranty and is not part of the repair or exchange process.

Limitation of Liability:

This warranty does not cover any problems caused by commercial use; accident; abuse; neglect; shock; electrostatic discharge; heat or humidity; improper installation, operation, maintenance or modification; any product with removed, damaged or tampered labels; malfunctions caused by other equipment; any misuse contrary to the instructions in the user guide; any damages from shipment, handling, or storage. This warranty does not cover data loss- backup of phonebook, contacts and/ or any other cellular phone content should be stored to an alternative medium in addition to this device. Also, consequential damages; incidental damages; and costs related to data recovery, removal and installation are not covered under this warranty. Except as specifically provided in this agreement or as required by law, the warranties and remedies stated in this document are exclusive and in lieu of all others, oral or written, expressed or implied. Any and all other warranties, including implied warranties of merchantability, fitness for a particular purpose and non-infringement of third party rights are expressly excluded. AWS shall not under any circumstances be liable to any person for any special, incidental, indirect or consequential damages, including without limitation, damages resulting from use or malfunction of the products, loss of profits or revenues or costs of replacement goods, even if AWS is informed in advance of the possibility of such damages. AWS' entire liability shall be limited to replacement, repair, or refund of the purchase price paid by you for the product, not to exceed any Manufacturer Set Retail Price (MSRP) by AWS for that product at AWS' option.

To Request Warranty Service:

Prior to returning any defective product, the end customer or the reseller from whom the end customer originally purchased the product must contact technical support to diagnose the product as defective and obtain a valid case number. Should Technical Support deem the product defective, a Return Materials Authorization (RMA) number and shipping instructions will be provided. AWS will not accept collect shipments - all defective products returned to AWS must have all shipping charges prepaid by the customer.

Legal Jurisdiction:

THIS WARRANTY AND AGREEMENT SHALL BE GOVERNED BY AND CONSTRUED IN ACCORDANCE WITH THE SUBSTANTIVE LAWS OF CALIFORNIA (USA). It gives You specific legal rights, and You may also have other rights that vary from state to state. This warranty does not affect any additional rights You may have under laws in your jurisdiction governing the sale of consumer goods. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the limitations or exclusions in this warranty statement may not apply to You. THE STATE AND FEDERAL COURTS LOCATED IN LOS ANGELES COUNTY, CALIFORNIA WILL HAVE EXCLUSIVE JURISDICTION OVER ANY DISPUTE ARISING OUT OF OR UNDER THIS AGREEMENT.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.



This product has been tested and was declared to comply with the following standard(s) or specification(s) according to European EMC Directive 89/336/EEC Emission: EN 55022: 1998 + A1:2000 +A2: 2003 Immunity: EN 55024: 1998 +A1: 2001 + A2: 2003, IEC 6100-4-2: 1995+ A1:1998 +A2: 2000, IEC 6100-4-3: 2002 + A1:2002

How To Find Your Cell Phone Model Number:

1. Turn off phone, and remove battery
2. Phone model number should be listed on the label beneath phone battery

Note: If you do not see your phone model listed on the compatibility charts, please contact us to see if your phone is compatible:

questions@backup-pal.com
call (888) 847-0483
www.backup-pal.com



Upgrading your Backup-Pal®

When using Backup-Pal® to transfer contacts to a phone not compatible with this kit, please contact us to determine if a supporting kit (containing a new Interface Adapter or Detachable Tip) is available for your phone.



BETTER TECHNOLOGY. BETTER PRODUCTS.

www.backup-pal.com
support@backup-pal.com

For a complete listing of compatible phones, please visit www.backup-pal.com or call 1-818-847-0483

Patent Pending
Made in China
REV 2.1

© 2006 - 2008 Advanced Wireless Solutions LLC. All rights reserved. Backup-Pal® is a registered trademark of Advanced Wireless Solutions LLC., in the United States and other countries. All brand names, trademarks and copyrights are the property of their respective owners.

IMPORTANT! RESTORE OPERATION WILL REPLACE EXISTING DATA INSIDE PHONE

Step 1. Use chart below to select adapter tip for your phone

USB Phone Tip Selection Chart

BlackBerry	Curve Series	8800 Series	Charm Series	**6210USB	**7130c/e/g/vUSB
	**8300USB	**8800USB	**7100USB	**6220USB	**7210USB
Motorola	KRAVE ZN4M3	RIZR **Z3M3	C341a, C343M2	T731cM2	V325, V325iUSB
	KRZR **K1M3	Z6C, **Z6M,M3	C343aM2	V60, V60 Color, V60ci,M2	V330M2
Nokia	2000 Series	6000 Series	**6233N2	**6288N2	7000 Series
	2865/2865iN2	**6085/6086N2	**6111N2	**6234N2	7270/7270bN2
Samsung	SCH Series	SGH Series	SGH-E878S4	SGH-T619S3	SPH Series
	SCH-A530S3	**SGH-A436S4	SGH-E900S4	SGH-T629S4	SPH-A420S3
LG	AX245L3	LX160L4	VX3400/VX3450L3	VX8600L4	LG Series (CANADA)
	AX275L4	LX260 RUMORL4	VX4650L3	**VX8610 DECOYM4	LG150L3
Sony Ericsson	K510E2	W300E2	W890E2	Z310E2	K550E2
	K550E2	W350E2	W900E2	Z520E2	K750E2

USB Phone Tips



*USB Adapter Tip Not Needed



Note: Included phone tips may vary based on your Backup-Pal kit (check compatibility chart on packaging)

IMPORTANT!
 Always Fully Charge and Restart Your Phone Before Using Backup-Pal

support@backup-pal.com
 (888)847-0483
 www.backup-pal.com

** Important! See back for additional steps for models marked with **

Step 2. Phones below require additional USB configuration

Important! If your phone is listed below, follow the setup instructions provided before using Backup-Pal

Phone Models		Phone USB Configuration Instructions
BlackBerry	All BlackBerry Phones	IMPORTANT! Before any RESTORE OPERATION, if your phone has "Wireless Synchronization" option, make sure to set it to "OFF". Otherwise, Blackberry Device will ignore all restored phonebook entries • Go to: Address Book ⇒ Menu(Press "Blackberry" button) ⇒ Options ⇒ Wireless Synchronization ⇒ Select: NO
	Password Protected BlackBerry Phones Only	Disable Password Protection before operation Option 1: Go to: Options ⇒ Security Options ⇒ General Settings ⇒ Password ⇒ Select: Disabled Option 2: If password can not be disabled, then your Blackberry Device must be controlled by the Blackberry Enterprise Server: • As an alternative, following models will prompt you to enter your password during a Backup-Pal Backup/Restore operation: o 8700c, 8700r, 8703e, 8800, 8820, 8830, 8100, 8110, 8120, 8300, 8310, 8320, 8330 o Backup-Pal will blink alternating Red-Green for 1 minute, during which the correct password must be entered on the phone prompt • If password can not be disabled, for the following older models, you will need to contact you enterprise server administrator to enable that option before Backup-Pal may be used with your phones: o 6210,6230,6280,6290, 6510, 7100g, 7100i,7100t,7100v, 7105t, 7210, 7250, 7280, 7290, 7510
Motorola	KRZR K1, L7, L71, L72, L9, RAZR V3i, V3r, V3t, RAZR2 V9, ROKR E1, E1070, V360, V361, V365, Z9	Set phone connection options to Data/Fax Connection mode: Go to: Menu ⇒ Settings ⇒ Connection ⇒ USB Settings ⇒ Default Connection: Data/Fax Connection
	RIZR Z3	Set phone connection options to Data Connection mode: Go to: Menu ⇒ Settings ⇒ USB settings ⇒ Default Connection: Data Connection
	KRZR K3 RAZR V3x, V6	Set phone connection options to Data Connection mode: Go to: Menu ⇒ Connection ⇒ USB settings ⇒ Default Connection: Data Connection
	Z6m KRZR K1m Alltel RAZR2 V9m	Set phone connection options to Modem/Computer mode: Option 1: Remove the Memory Card Option 2: Go to: Menu ⇒ Setting ⇒ Connection ⇒ USB settings ⇒ Default Connection: Data Connection
E816, W490, W510 RAZR V3xx Cingular	Set phone connection options to Computer or Data mode: Go to: Menu ⇒ Setting ⇒ Connection ⇒ USB settings ⇒ Default Connection: Computer or Data	
Nokia	3110c, 3500c, 5300/5300b, 6085, 6086, 6111, 6125, 6126, 6131, 6133/6133b, 6136, 6151, 6165i, 6233, 6267, 6275i, 6280, 6288, 6300, 6301, 7370, 7373, 7390, 5200, 7500(PRISM)	During BACKUP or RESTORE operation phone will: 1. Prompt you, "USB Data cable connected. Select Mode " Press "OK" on the phone to continue 2. Then your phone will prompt you to select a mode: Choose "Nokia Mode" or "Default Mode", then press "OK" on the phone to continue
	5310, 5610, 6500 (Slide), 6500(Classic)	Set phone USB Mode to "PC Suite": Option 1: During BACKUP or RESTORE operation when prompted "Select USB Mode", select "PC Suite", then press "OK" Option 2: Go to: Menu ⇒ Setting ⇒ Connectivity ⇒ USB Data Cable ⇒ Set Default USB Mode to "PC Suite"
	6263 6555/6555b 3555b	During BACKUP or RESTORE operation phone will prompt for selection of "USB Mode" or "Music Sync": While Backup-Pal is flashing Red/Green: Go to: Menu ⇒ Setting ⇒ Connectivity ⇒ USB Data Cable ⇒ Select: "Nokia Mode"
	6230i	Disable "Data Storage Device" USB Mode on the phone: Option 1: Remove the Memory Card Option 2: During BACKUP or RESTORE operation when prompted "Use phone as data storage device?", select "Reject"
Samsung	SPH-A700, SPH-A560, SPH-A420, SPH-A820	Phone limitation: Phonebook Note Fields WILL NOT be backed-up or restored
	SCH-A645, SPH-A700, SCH-U340	Phone limitation: Phonebook Nickname Fields WILL NOT be backed-up or restored
	SPH-A580, SPH-A600, SPH-A620 SPH-A660, SPH-A680, SPH-A840	Phone limitation: Phonebook Birthday Fields WILL NOT be backed-up or restored
	SPH-A580	Phone limitation: Phone returns Blank Email if Phonebook Email contains over 71 characters
	SGH-T229, SGH-T339, SGH-T409, SGH-T429, SGH-A436, SGH-A437, SGH-T229, SGH-T739, SGH-D830	Important! Phone must be FULLY CHARGED before using with Backup-Pal. Otherwise, will not work -- a phone limitation
	SGH-D900i	Before any operation: Set phone connection options to Modem mode Go to: Menu ⇒ Setting ⇒ Phone Settings ⇒ USB Settings ⇒ Select: Modem Phone limitation: Only first 20 characters of Phonebook Note Fields can be backed-up
	SGH-E840 SGH-T539 BEAT SGH-U100 SGH-U600 SGH-X830	1. Important! Phone must be FULLY CHARGED before using with Backup-Pal. Otherwise, will not work -- a phone limitation 2. Select "USB Mode" settings: Option 1: During BACKUP/RESTORE operation : • Phone will prompt "USB Mode" selection select "PC Suite" option Option 2: Before any operation • Go to: Menu ⇒ Setting ⇒ USB Settings ⇒ Select: Modem
	SGH-M610 SGH-T729 BLAST	1. Important! Phone must be FULLY CHARGED before using with Backup-Pal. Otherwise, will not work -- a phone limitation 2. Before any operation, select "PC Studio" mode: • Go to: Menu ⇒ Setting ⇒ Phone Settings ⇒ USB Mode ⇒ Select: PC Studio
	SPH-A680	Extremely Important Information! Phonebook e-mails longer than 32 characters cause this phone shut down during BACKUP operation. Please ensure e-mail addresses for all contacts have less than 32 characters before backing up any SPH-A680 phones! Other phone limitation: Phone returns Blank Address Field if Phonebook Address contains over 71 characters
	SCH-U470 JUKE	Important! Before any operation Follow these steps on the phone to set MTP Setting: 1. Go to: Menu ⇒ Setting & Tools ⇒ "OK" 2. Enter #000000 on phone keypad ⇒ "OK" 3. MTP Settings ⇒ "OK" ⇒ MSM ⇒ "OK" ⇒ Press "END"
SGH-T439, SGH-D908	1. Important! Phone must be FULLY CHARGED before using with Backup-Pal. Otherwise, will not work -- a phone limitation 2. Before any operation, select "Modem" mode: • Go to: Menu ⇒ Setting ⇒ Phone Settings ⇒ USB Settings ⇒ Select: Modem	
LG	AX300, AX830 GLIMMER AX565, AX380	1. Important! Phone must be FULLY CHARGED before using with Backup-Pal. Otherwise, will not work -- a phone limitation 2. Before any operation, select "USB Modem" mode: • Go to: Menu ⇒ Setting ⇒ PC Connection (USB Connection): Modem
	VX8550(CHOCOLATE II) VX8550A(CHOCOLATE II) VX8560(CHOCOLATE III) VX8610 DECOY, VX8800 VENUS VX9100 enV2, VX9700 DARE VX10000 VOYAGER	1. Important! Phone must be FULLY CHARGED before using with Backup-Pal. Otherwise, will not work -- a phone limitation 2. Set "Data" Sync option on the phone: Option 1: During BACKUP/RESTORE operation : • Phone will prompt "Select Sync option for USB connection" selection, select "DATA" option Option 2: Before any operation • Go to: Menu ⇒ Connection & Tools ⇒ USB Settings ⇒ USB Auto Sync(or USB Auto Detection) : Sync Data
	LX570 MUZIQ	During BACKUP or RESTORE operation phone will prompt, "USB Connection: Press OK to enter": • No action required, Backup-Pal will connect automatically